

Quick Interchange

GOULDS PUMP	Location	ProTech Part No.
3138 S	INBOARD	LSE-2125-3000-1-1
3139 S	INBOARD	LSE-2125-3000-1-1
3145 S	OUTBOARD	LSE-2375-3250-1-1
3171 L	OUTBOARD	LPE-1875-5000-B67
3171 M	OUTBOARD	LSE-1375-3625-B66
3171 S	OUTBOARD	LPE-0875-2750-B79
3175 L	OUTBOARD	LSE-4125-5250-5-1
	INBOARD	LSE-4313-5500-5-1
3175 M	OUTBOARD	LSE-3125-4125-1-1
	INBOARD	LSE-3313-4125-1-1
3175 S	OUTBOARD	LSE-2375-3250-1-1
	INBOARD	LSE-2500-3250-1-1
3175 XL	OUTBOARD	LPE-4313-5500-C05
	INBOARD	LSE-5000-6250-5-1
3180 L	OUTBOARD/INBOARD	LSM-0700-0950-1-1
3180 M	OUTBOARD	LSM-0480-0700-1-1
3180 S	OUTBOARD	LSM-0480-0700-1-1
	INBOARD	LSM-0550-0800-1-1
3180 XL	OUTBOARD	LSM-0850-1100-1-1
3185 L	INBOARD	LSM-0700-0950-1-1
3185 M	OUTBOARD	LSM-0600-0850-1-1
3185 S	OUTBOARD	LSM-0480-0700-1-1
	INBOARD	LSM-0550-0800-1-1
3185 XL	OUTBOARD	LSM-0850-1100-1-1
3196 LT/LTC/LTX	OUTBOARD	LSE-1875-2750-1-1
	INBOARD	LSE-2125-2875-1-1
3196 MT/MTX	OUTBOARD	LSE-1125-2000-1-1
	INBOARD	LSE-1752-2875-1-1
3196 ST/STX	OUTBOARD	LPE-0875-1250-B48
	INBOARD	LPE-1375-2835-B47
3196 XLT/XTX	OUTBOARD	LSE-2375-3250-1-1
	INBOARD	LSE-2500-3250-1-1
3316 L	INBOARD	LSE-1937-3000-1-1
	OUTBOARD	LSE-2062-3000-1-1
3316 M	OUTBOARD	LSE-1375-2125-1-1
	INBOARD	LSE-1437-2250-1-1
3316 S	INBOARD	LPE-1063-1643-F08
	OUTBOARD	LSE-0937-1500-1-1
3410 L	OUTBOARD	LPE-2187-3000-1-1
	INBOARD	LPE-2125-3000-1-1
3410 M	OUTBOARD	LPE-1500-2125-Q57
	INBOARD	LPE-1375-2125-Q58
3410 S	OUTBOARD	LPE-1500-2125-Q57
	INBOARD	LPE-1375-2125-Q58
3996 M	OUTBOARD	LPE-1750-2875-B49
	INBOARD	LPE-1250-2000-B50
3996 S	OUTBOARD	LPE-0875-1250-B48
	INBOARD	LPE-1375-1875-C56
	INBOARD	LPE-1375-2125-B63

DURCO PUMP	Location	ProTech Part No.
MK II GRP I	OUTBOARD	LSE-0875-1625-1-1
	INBOARD	LPE-1125-2441-C70
MK II GRP II	OUTBOARD	LSE-1125-2000-1-1
	INBOARD	LSE-1875-2625-1-1
MK II GRP III	OUTBOARD	LSE-2625-3675-1-1
	INBOARD	LSE-2625-3625-1-1
MK III GRP I	OUTBOARD	LDE-0875-1625-1-1
	INBOARD	LDE-1375-2835-1-1
MK III GRP II	OUTBOARD	LDE-1125-2000-1-1
	INBOARD	LDE-1875-2625-1-1
MK III GRP III	OUTBOARD	LSE-1625-3675-1-1
	INBOARD	LDE-1625-3675-1-1

ITT-AC PUMP	Location	ProTech Part No.
CSO, F4A1	INBOARD	LSE-1000-1750-1-1
	OUTBOARD	LSE-1000-1750-1-1
CSO, F4B2	INBOARD	LSE-1750-2375-1-1
	OUTBOARD	LSE-1125-1750-1-1
CSO, F4B3	INBOARD	LSE-1750-2372-1-1
	OUTBOARD	LSE-1125-1750-1-1
CSO, F4D1	INBOARD	LPE-2125-2875-F73
	OUTBOARD	LSE-1250-2000-1-1
PWO, F8B1	INBOARD	LSE-3250-4000-1-1
	OUTBOARD	LSE-2750-3500-1-1
PWO, F8B2	INBOARD	LSE-3250-4000-1-1
	OUTBOARD	LSE-2750-3500-1-1
PWO, F8B4	INBOARD	LSE-3250-4000-1-1
	OUTBOARD	LSE-2750-3500-1-1
PWO, F8M1	INBOARD	LSE-3250-4000-1-1
	OUTBOARD	LSE-2750-3500-1-1
PWO, F9B1	INBOARD	LSE-3250-4000-1-1
	OUTBOARD	LSE-2750-3500-1-1
PWO, F9M1	INBOARD	LSE-3250-4000-1-1
	OUTBOARD	LSE-2750-3500-1-1
PWO, F8C1	INBOARD	LSE-4500-5500-5-1
	OUTBOARD	LSE-3750-4750-1-1

WARREN PUMP	Location	ProTech Part No.
8 MARK I	INBOARD	LSE-2875-4125-1-1
	OUTBOARD	LSE-2000-3125-1-1
11 MARK I	INBOARD	LSE-4500-5250-5-1
	OUTBOARD	LSE-3500-4375-1-1
11 MARK II	INBOARD	LSE-5000-6000-5-1
	OUTBOARD	LSE-3500-4375-1-1
125 MARK I	INBOARD	LPE-5250-6500-5-1
	OUTBOARD	LSE-4000-5375-5-1
125 MARK II	INBOARD	LSE-5875-7125-5-1
	OUTBOARD	LSE-4000-5375-5-1
138 MARK II	INBOARD	LSE-6250-7750-H19
	OUTBOARD	LSE-4500-6000-5-1

Call factory for complete pump list • Call factory for electric motor interchanges